

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Please read the following safety warnings and precautions before using your device.
Note: If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

Introduction

Congratulations on your purchase of the BIB-475, *Holy Bible – King James Version & New International Version, with Holman Bible Dictionary*. The BIB-475 is a terrific resource for reading and studying scripture.

You can search for words between both versions of the Bible and the dictionary. You can compare Verses between both versions of the Bible. There is an Index if you want to find Bible passages by topic. There is a Devotional and a *Learn-a-Verse* feature where you can see varied and notable Verses.

You can keep track of the time with the home and world clocks. Use the databank to save names and addresses. Use the calculator and metric and currency converters to perform calculations.

Battery Precautions

Your device is powered by two AAA batteries.

- Non-rechargeable batteries are not to be re-charged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.
- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.

- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.

Product Care

Your device is designed to be light, compact and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage.

In order to avoid damage to your device, please:

- Keep the lid closed when you are not using it. This will protect the screen from being broken, scratched or marred in any way.
- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wipe its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly dispose of the product avoiding contact with your skin, then wash your hands immediately.
- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.


 


 
 
 
 


 

 
Key Guide

- Soft Keys***
- MORE** Expands a search to include synonyms and similar words.
 - FIND** Goes to the word search screen for the current book.
 - MARK** Displays the list of bookmarks in the current book. In text, adds a bookmark at your current location.
 - NOTE** Displays the text of a footnote in text. If more than one footnote marker is on the screen, cycles a highlight through all the markers on the screen.

**Each unlabeled key at the top of the keyboard corresponds to the function displayed at the bottom of the screen directly above that key. Press the corresponding key to perform the function you want.*

- REF** Goes to the Verse Reference screen for the current book. **Note:** The Verse Reference screen is only available in either version of the Holy Bible.
- XREF** Goes to the cross-referenced text. If more than one cross-reference marker is on the screen, cycles a highlight through all the markers on the screen.
- CLOCK** Goes to the clock.
- DATA** Goes to the databank.
- CALC** Goes to the calculator.
- CONV** Goes to the metric converter.
- CURR** Goes to the currency converter.

Function Keys

-  Turns the device on or off.
-  In either version of the Bible, goes to the Verse Reference Screen. In the dictionary, goes to the word entry screen. Clears the calculator. Returns to the top of the Databank or Conversions menus.
-  Displays a help message.
-  Turns the backlight on or off.
-  Shifts to type capital letters and punctuation marks.
-  Backs up, erases a letters, or turns off the highlight in text.
-  Looks up a word or verse, selects an item, or begins a highlight in text. In the calculator, performs a calculation.
-  At a word search or Verse Reference screen, types a space.
-  Shifts to allow *PREV*, *NEXT* and to type numbers and punctuation marks.
-  Returns to your previous location in the Holy Bible, King James Version. If a word is highlighted, looks up that word in the King James Version.
-  Returns to your previous location in the Holy Bible, New International Version. If a word is highlighted, looks up that word in the New International Version.
-  Returns to your previous location in the Holman Bible Dictionary. If a word is highlighted, looks up that word in the dictionary.
-  At a word search screen, types an asterisk (*) to stand for a series of letters in a word.



At a menu, displays a menu item. In Bible text, displays the Book, Chapter and Verse. In dictionary text, displays the headword.



Types an underscore.



Goes to the Organizer.



Goes to the main menu of either Bible or the dictionary, where you can access the device settings, a tutorial, or a demo.

Direction Keys



Move in the indicated direction. In text, press the up (▲) or down (▼) part of the button to scroll up or down one line at a time. In the main menu, press the right (▶) or left (◀) part of the button to move between the main and Setup menus.



Scrolls down one screen at a time.



Scrolls up one screen at a time.



Scrolls down one screen at a time.

Combination Keys*



Looks up the current verse in the other version of the Bible.



Goes to the start of the next or previous Bible Verse. Following a search, goes to the next or previous dictionary entry.



Goes to the bottom or top of the current dictionary entry. Goes to the next or previous Bible Chapter.



Selects a cross-reference, footnote or bookmark marker in text. Goes directly to text from a menu.



Types an apostrophe.†



Types a comma.†



Types a slash.†



Types a hyphen.



Types an "@".

*Hold the first key while pressing the second.

 
† FN can be used in place of CAP for these functions.

Replacing the Batteries

Your device is powered by two AAA batteries. Follow these easy instructions to install or replace them. The batteries should be changed when you see a low battery warning. Please have the new batteries at hand before you remove the old ones.

Warning! If the batteries wear out completely, or if you take more than a few seconds while changing the batteries, any user entered information may be erased. You should always keep written copies of your important information.

1. Turn the unit off and turn it over.
2. Slide the battery cover off by gently pushing in the direction of the arrow.
3. Remove the old batteries.
4. Install 2 new AAA batteries following the +/- markings in the compartment.

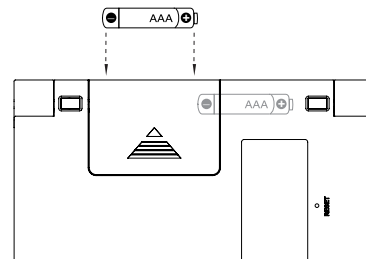

Important: Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.

5. Replace the battery cover.

For Your Information

Follow the Arrows

The flashing arrows on the right side of the screen show in which direction you can move around menus or view more text.

Help is Always at Hand

You can view a help message at any screen by pressing **HELP**. Use the direction keys to read the message. To exit help, press **BACK** or **CLEAR**.

Resuming Where You Left Off

You can turn your electronic Bible off at any location. When you turn it on again, the last place you viewed appears, unless you had previously turned on the *Learn-a-Verse* feature. If *Learn-a-Verse* is on and you last powered down in either Bible, you will see a verse for you to study or memorize.

Where Am I?

At any Bible Verse (or dictionary entry) you can view the Book, Chapter and Verse (or dictionary headword) by pressing **?**.

 
About Screen Illustrations

Some screen illustrations in the User's Guide may differ slightly from what you see on the screen. This does not mean that your unit is malfunctioning.

Viewing a Demonstration or Tutorial

You can view a demonstration or tutorial of the dictionary or either Bible in this device any time you want. Each book has its own demonstration and tutorial.

1. Press **KJV**, **NIV** or **DICT** to access the book you want.
2. Press **MENU**.
3. Press **▶** to see the Setup menu.

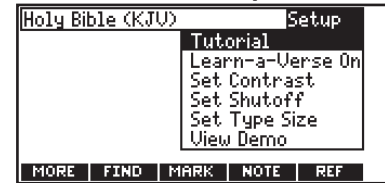

4. Press **▼** or **▲** until **Tutorial** or **View Demo** is highlighted and then press **ENTER**.

To stop the demonstration or exit from the Tutorial and go to the word search screen in the dictionary or the Verse Reference screen in either Bible, press **CLEAR**.

Changing the Settings

When using this device, you can activate the *Learn-a-Verse* feature and adjust the screen contrast, the shutoff time and the type size. **Note:** The *Learn-a-Verse* setting is only available while viewing a Bible.

1. Press **MENU**.
2. Press **▶** to see the Setup menu.
3. Press **▼** or **▲** to move the highlight to **Learn-a-Verse On/Off**, **Set Contrast**, **Set Shutoff** or **Set Type Size** and then press **ENTER**.

Your device comes with a *Learn-a-Verse* feature. Each time you turn your device on (if you last powered down in either Bible) you can see a Verse for you to study or memorize. To turn this feature on, press **ENTER** when *Learn-a-Verse On* is highlighted. To turn this feature off, press **ENTER** when *Learn-a-Verse Off* is highlighted.

Set Contrast determines how dark or light the screen is.

Set Shutoff determines how long your device stays on if no key is pressed.

Set Type Size determines how large or small the text is in this device.

4. Press **ENTER**.
5. Press **▼** or **▲** to change the setting. The current setting is marked.
6. Press **ENTER** to save your changes. Press **BACK** to exit without making a change.

Moving Between the Books

From anywhere in your device, press **KJV**, **NIV** or **DICT** at any time to return to your last location in the *Holy Bible*, *King James Version*, *Holy Bible*, *New International Version* or *Holman Bible Dictionary*, respectively.

Referencing a Verse

While reading a Verse in either version of the Bible, you can see that Verse in the other version so you can compare the text. In the dictionary, many entries contain cross-references to particular Verses and you can easily view the referenced Verses.

 
From a Bible Verse

1. Press **KJV** (or **NIV**).
2. Press **CLEAR**, if necessary, to go to the Verse Reference Screen.
3. Type a Book title, Chapter number and Verse number.


Type the initial letters of a Book and the title will be completed for you. For example, type **la** for *Lamentations*, **le** for *Leviticus* or **lu** for *Luke*.

To find a Book that has more than one volume, you need to type the numeral first. For example, to find *II Corinthians*, type **ii** or **ico**. To type numbers, hold **FN** and press **Q-P**.

4. Press **ENTER** to see the Verse.

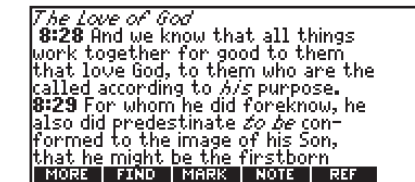


 5. Hold FN and press NIV (or KJV) to see that Verse in the other Bible version.

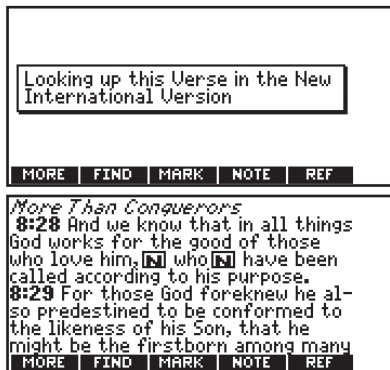


From the Dictionary

 1. Press DICT.
2. Press CLEAR or FIND, if necessary, to go to the word search screen.
3. Type a word and press ENTER.
4. Press ▼, PAGE DOWN or SPACE to read the entry.
5. When you see a Verse reference you want to look up, press ENTER to turn on the highlight.
6. Use the navigation button to move the highlight to the verse you want.

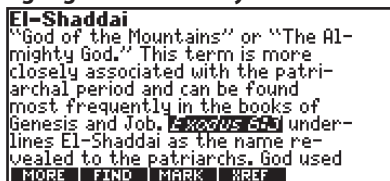

 7. Press KJV or NIV to look up the Verse in the King James Version or New International Version, respectively.

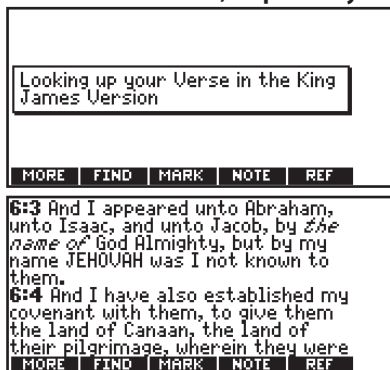


8. Press DICT to return to your previous location in the dictionary.


Looking up a Word

When you are reading a particular Bible Verse or dictionary entry and you see a word you want to learn more about, you can search for that word in any book.

 1. Press KJV, NIV or DICT.
2. Press CLEAR or FIND.
3. Go to any location in the text.
4. Press ▼, PAGE DOWN or SPACE to read the text.
5. When you see a word you want to learn more about, press ENTER to turn on the highlight.
6. Use the navigation button to move the highlight to the word you want.

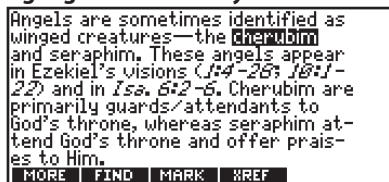

 7. Press KJV, NIV or DICT to search for the highlighted word in the *Holy Bible*, *King James Version*, *Holy Bible*, *New International Version* or *Holman Bible Dictionary*, respectively.

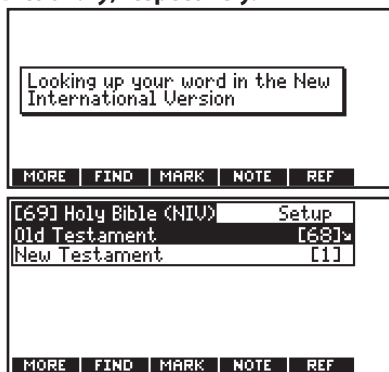

To learn how to view the matches, please see "Finding Dictionary Entries" or "Searching for Words in a Bible".

8. Press KJV, NIV or DICT to return to your previous book and continue reading.

Reading the Holy Bible

1. Press KJV (or NIV).
2. Press MENU.



3. *Old Testament* is highlighted. Press ENTER or press ▼ to highlight *New Testament* and then press ENTER.



Old Testament and *New Testament* contain the Books of the Bible.

4. Press ▼ or ▲ to highlight a Book and press ENTER to select it.
Note: You can also begin typing the name of a Book to go directly to that Book.
5. Press ▼ or ▲ to highlight a Chapter, or type its number and press ENTER to select it.
6. Press ▼, PAGE DOWN or SPACE to read the text.
 Hold FN and press ► or ◀ to go to the next or previous Verse. Hold FN and press ▼ or ▲ to go to the next or previous Chapter.
7. Press CLEAR when done.

Using the Bible Index

Index contains a list of section titles and topics, arranged in the order they appear in the Bible.

1. Press KJV (or NIV).
2. Press MENU.
3. Press ▼ to highlight *Index* and then press ENTER.



4. Press ▼ or ▲ to highlight a section and press ENTER to select it.

Note: You can also begin typing the name of a Book to go directly to the first section from that Book.

5. Press ▼, PAGE DOWN or SPACE to read the text.

 
Hold FN and press ► or ◀ to go to the next or previous Verse. Hold FN and press ▼ or ▲ to go to the next or previous Chapter.

6. Press CLEAR when done.

Viewing Devotional Verses

Available only in a Bible, *Devotional* contains a list of popular and inspirational Verses, organized by date.

1. Press KJV (or NIV).
2. Press MENU.
3. Press ▼ to highlight *Devotional* and then press ENTER.

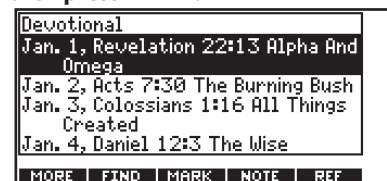

4. Press ▼ or ▲ to highlight a Verse and press ENTER to select it.
Note: You can also begin typing the month to go directly to the first Devotional Verse for that month.
5. Press ▼, PAGE DOWN or SPACE to read the text.
 Hold FN and press ► or ◀ to go to the next or previous Verse. Hold FN and press ▼ or ▲ to go to the next or previous Chapter.
6. Press CLEAR when done.

Finding Bible Verses

Each version of the Bible contains a Verse Reference screen where you can type a Book title, Chapter number and Verse number to go directly to a specific Bible Verse.

Note: If you enter only a Book title and Chapter number, you will go to the start of the Chapter. If you enter only a Book title, you will go to the start of the Book.

1. Press **KJV** (or **NIV**).
2. Press **CLEAR**, if necessary, to go to the Verse Reference screen.
3. Type a Book title, Chapter number and Verse number.

Type the initial letters of a Book and the title will be completed for you. For example, type **la** for *Lamentations*, **le** for *Leviticus* or **lu** for *Luke*.

To find a Book that has more than one volume, you need to type the numeral first. For example, to find *II Corinthians*, type **iico**.

To type numbers, hold **FN** and press **Q-P**.

4. Press **ENTER** to see the Verse.

5. Press **▼**, **PAGE DOWN** or **SPACE** to read the text.

Hold **FN** and press **▶** or **◀** to go to the next or previous Verse. Hold **FN** and press **▼** or **▲** to go to the next or previous Chapter. Hold **FN** and press **NIV** (or **KJV**) to see the current Verse in the other Bible version.

6. Press **CLEAR** when done.

Finding Dictionary Entries

1. Press **DICT**.
2. Press **CLEAR** or **FIND**, if necessary, to go to the word search screen.
3. Type a word or words.

To type a space, press **SPACE**. To erase a letter, press **BACK**. You do not need to type capital letters.

4. Press **ENTER** to search for entries matching the word or words you typed.

The first matching entry is displayed.

5. Press **▼**, **PAGE DOWN** or **SPACE** to read the text.
Hold **FN** and press **▶** or **◀** to go to the next or previous matching entry, if available.
6. Press **CLEAR** when done.

✓ Correcting Misspellings

If you enter a misspelled word, or a word not in the dictionary, a list of corrections is displayed. Press **▼** or **▲** to highlight the correction you want and then press **ENTER** to continue with your search. Press **BACK** to return to the word search screen and change your request.

Searching for Words in a Bible

Just as if you were using a concordance, you can search for almost any word or phrase in the Bible. Simply enter search words to find Verses that use those words.

1. Press **KJV** (or **NIV**).
2. Press **FIND**.
3. Type your search word or words.

To type a space, press **SPACE**. To erase a letter, press **BACK**.

Note: Search results include only those Verses that contain all of the keywords you searched for. You cannot search for common words such as *and* and *the* on their own.

4. Press **ENTER** to start the search.

After a search, only those sections of the Bible with matches are displayed in the menu. **Note:** The number of matches in each section is displayed following the section title.

5. Press **▼** or **▲** to highlight the section you want and then press **ENTER** to see the Books of the selected section where the matches occur.

You can also hold **FN** and press **ENTER** to go directly to the text. You will go to the first match.

6. Press **▼** or **▲** to highlight the Book you want and then press **ENTER** to see the Chapters of the selected Book where the matches occur.

7. Press **▼** or **▲** to highlight the Chapter you want and then press **ENTER** to see the first matching Verse in that Chapter.

Note: Words in the Verse that match your search are boxed.

8. Press **▼**, **PAGE DOWN** or **SPACE** to read the text.
Hold **FN** and press **▶** or **◀** to go to the next or previous match.
Hold **FN** and press **NIV** (or **KJV**) to see the current Verse in the other Bible version.

9. Press **CLEAR** when done.

✓ Correcting Misspellings

If you enter a misspelled word, or a word not in the Bible, a list of corrections is displayed. Press **▼** or **▲** to highlight the correction you want and then press **ENTER** to continue with your search. Press **BACK** to return to the word search screen and change your request. **Note:** If you still can't find your word, try changing versions by pressing **KJV** or **NIV** and searching again in the other Bible version.

Finding Letters in Words

If you are uncertain about how to spell a word or if you wish to find prefixes, suffixes and other parts of words, type an asterisk (*) in a word. Each asterisk stands for zero, one or more letters in a word. **Note:** If you type an asterisk at the beginning of a word, it may take a little while to find the matching words.

1. Press **KJV**, **NIV** or **DICT**.
2. Press **FIND** to go to the word search screen.

In the dictionary, you can also press **CLEAR**.

3. Type a word with *s.

4. Press **ENTER**.

5. Press **▼** or **▲** to highlight the match you want and then press **ENTER** to search for that word.

To learn how to view the matches, please see “Finding Dictionary Entries” or “Searching for Words in a Bible”.

6. Press **CLEAR** when done.

Expanding Your Search

You can also expand any search to include inflections, synonyms and similar words.

1. Press **KJV**, **NIV** or **DICT**.
2. Press **FIND** to go to the word search screen.

In the dictionary, you can also press **CLEAR**.

3. Type a word or words.
4. Press **ENTER**.



Your first level matches are displayed. To learn how to view the matches, please see “Finding Dictionary Entries” or “Searching for Words in a Bible”.

5. Press **MORE** to expand the search.



 
Continue viewing matches or pressing **MORE** until no additional matches are displayed.

6. Press **CLEAR** when done.


Highlighting Words

You can search for a word by highlighting it in a dictionary entry or Verse.

1. Press **KJV**, **NIV** or **DICT**.
2. Press **CLEAR** or **FIND**.
3. Go to any location in the text.
4. Press **▼**, **PAGE DOWN** or **SPACE** to read the text.
5. When you see a word you want to learn more about, press **ENTER** to turn on the highlight.

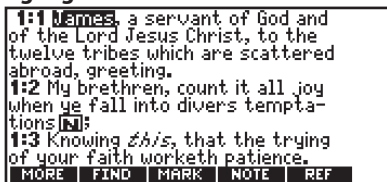

 6. Use the navigation button to move the highlight to the word you want.

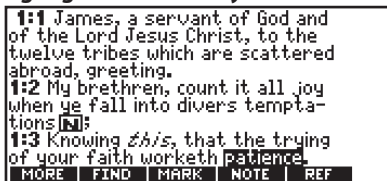

7. Press **ENTER** to search for that word in the current book.



To learn how to view the matches, please see “Finding Dictionary Entries” or “Searching for Words in a Bible”.

 
Press **KJV**, **NIV** or **DICT** to search for the highlighted word in the *Holy Bible*, *King James Version*, *Holy Bible*, *New International Version* or *Holman Bible Dictionary*, respectively.

8. Press **CLEAR** when done.

Viewing Footnotes

In the Bible, whenever you see **FN** following a word in a Verse, that word has a footnote. You can easily view these foot notes.

1. Press **KJV** (or **NIV**).
2. Press **CLEAR**, if necessary, to go to the Verse Reference screen.
3. Type a Book title, Chapter number and Verse number that contains a footnote. For example, type *ps182* to type “Psalms 18:2”.
4. Press **ENTER**.

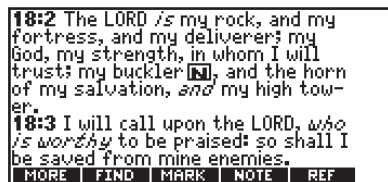

5. Press **▼**, **PAGE DOWN** or **SPACE**, if necessary, to read the text until you see the footnote marker.

6. Press **NOTE**.



You can also hold **FN** and press **ENTER**. You automatically open the footnote.

7. Press **BACK** to return to the Verse.
8. Press **CLEAR** when done.

✓ Understanding Footnotes

The footnotes in the Bibles have been added by Franklin Electronic Publishers to clarify the meaning of archaic English words. These footnotes are not part of the original King James or New International Versions of the Holy Bible.

✓ When More Than One Footnote Marker Appears

Sometimes more than one **FN** appears on the screen. Pressing **NOTE** (or holding **FN** and pressing **ENTER**) highlights the first **FN**. Press **NOTE** repeatedly until the **FN** you want is highlighted. Then press **ENTER** to see the footnote. Press **BACK** to return to the previous entry.

 
Viewing

Cross-referenced Entries

In the dictionary, whenever you see **XREF** following a word, that word is cross-referenced from the current entry. You can easily go to these cross-references.



1. Press **DICT**.
2. Press **CLEAR** or **FIND**, if necessary, to go to the word search screen.
3. Type a word or words. For example, type *Goliath*.
To erase a letter, press **BACK**. Note: You do not need to type capital letters.

4. Press **ENTER**.

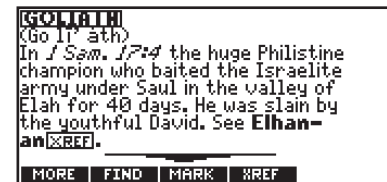

5. Press **▼**, **PAGE DOWN** or **SPACE**, if necessary, to read the text until you see the cross-reference marker.

  6. Press **XREF**.

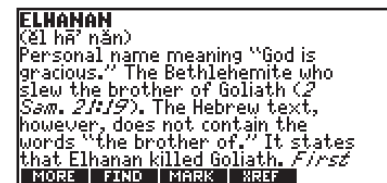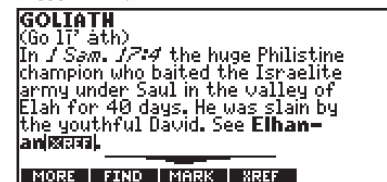

You can also hold **FN** and press **ENTER**. You automatically go to the cross-referenced entry.

7. Press **BACK** to return to the previous entry.
8. Press **CLEAR** when done.

✓ When More Than One Cross-reference Marker Appears

 
Sometimes more than one **XREF** appears on the screen. Pressing **XREF** (or holding **FN** and pressing **ENTER**) highlights the first **XREF**. Press **XREF** repeatedly until the **XREF** you want is highlighted. Then press **ENTER** to see the cross-referenced entry. Press **BACK** to return to the previous entry.

Using Bookmarks

You can add up to 50 bookmarks to the text of the dictionary or Bibles for quick reference.

Adding Bookmarks


1. Press **KJV, NIV or DICT**.
2. Press **CLEAR or FIND**.
3. Go to any location in the text.

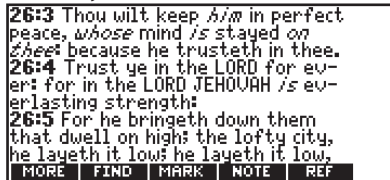

4. Press **▼, PAGE DOWN or SPACE** to read the text.
5. Press **MARK** at any location where you want to place a bookmark.



 6. **Add bookmark** is highlighted. Press **ENTER** to add the bookmark.

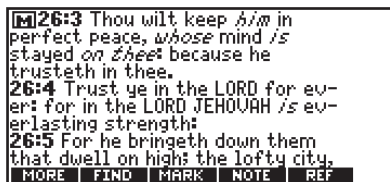


M marks the placement of the bookmark in the text.

7. Press **CLEAR** when done.

Viewing Bookmarks

 1. Press **KJV, NIV or DICT**.
2. Press **CLEAR or FIND**.
3. Press **MARK**.

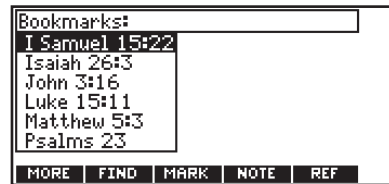


The bookmark list is displayed.

4. Press **▼ or ▲** to highlight a bookmark.
 5. Press **ENTER** to view the text at the location of the bookmark.
- Press **BACK** to return to the bookmark list.
6. Press **CLEAR** when done.

Deleting Bookmarks

 1. Press **KJV, NIV or DICT**.
 2. Press **CLEAR or FIND**.
 3. Press **MARK**.
- The bookmark list is displayed.
4. Press **▼ or ▲** to highlight a bookmark.
 5. Press **ENTER** to view the text at the location of the bookmark.
 6. Press **MARK** from the location of the bookmark in text.

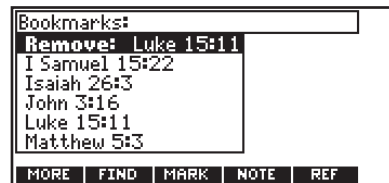

7. **Remove: ...** is highlighted. Press **ENTER** to delete the bookmark.
8. Press **CLEAR** when done.

Using the Clock

The clock displays the current time and date. Your clock can keep track of both a home and world time.

1. Press **ORG**.
Every time you press **ORG**, the home time clock is displayed.
2. Press **CLOCK** to toggle between the home and world clocks.
3. From the home clock, press **ENTER** to set the time and date.
Press **▼ or ▲** to scroll through the options in the highlighted field.
Press **▶** and **◀** to move to another field.

4. Press **ENTER** when done.
Press **CLEAR** to exit without saving the settings.
5. Press **CLOCK** to toggle to the world clock.
6. Set the world time the same way you set the home time.
7. Press **KJV, NIV or DICT** to exit the Organizer.

Using the Databank

Adding Entries

You can store as many as 100 names, numbers and addresses in the databank. The total number depends on the size of each entry.

1. Press **ORG**.
2. Press **DATA**.
3. Press **▼ or ▲** to highlight **Add an Entry**, if necessary, and then press **ENTER**.
4. Type a name and then press **ENTER**.
Press **BACK** to delete a character. Use **◀** or **▶** to move the cursor. To type a number or symbol on a letter key, hold **FN** and press the letter.
5. Type a phone number and then press **ENTER**.
Press **BACK** to delete a character. Use **◀** or **▶** to move the cursor. **Note: Q-P** will type number 1-0 automatically. To type a hyphen, period or at symbol, press **J(-)**, **G(.)** or **M(@)** respectively. To type a letter with an automatically shifted function, hold **FN** and press the letter.
6. Type an address.
Press **BACK** to delete a character. Use **◀** or **▶** to move the cursor. To type a number or symbol on a letter key, hold **FN** and press the letter. To type a hyphen, period or at symbol, hold **FN** and press **J(-)**, **G(.)** or **M(@)** respectively.

7. Press **ENTER** to save the entry.
Press **BACK** to exit without saving the entry.
8. Press **CLEAR** when done.
Press **KJV, NIV or DICT** to exit the Organizer.

Viewing or Editing Entries

1. Press **ORG**.
2. Press **DATA**.
3. Press **▼ or ▲** to highlight **View: ...**, if necessary, and then press **ENTER**.

4. Press **▼ or ▲** to scroll through the list.
The list is arranged alphabetically by name. Press **SPACE** to scroll down one screen at a time. Hold **CAP** and press **▼** or **▲** to go to the bottom or top of the list. Press **PAGE UP** or **PAGE DOWN** to scroll up or down one screen at a time.
You can also type the first few letters of a name to go directly to that part of your list.
5. Press **ENTER** to edit the highlighted entry.
6. Make your changes.
Press **BACK** to delete a letter or number. Press **◀** or **▶** to move the cursor to the location in the line where you want to make changes. Press **ENTER** to move to the next field.
7. Press **ENTER** from the "Address" field to save your changes.
8. From the phone list, press **CLEAR** to return to the Databank menu.
Press **KJV, NIV or DICT** to exit the Organizer.

Deleting Entries

1. Press **ORG**.
2. Press **DATA**.
3. Press **▼ or ▲** to highlight **Delete an Entry** and then press **ENTER**.
4. Press **▼ or ▲** to highlight the entry you want to delete.
The list is arranged alphabetically by name. Press **SPACE** to scroll down one screen at a time. Hold **CAP** and press **▼** or **▲** to go to the bottom or top of the list. Press **PAGE UP** or **PAGE DOWN** to scroll up or down one screen at a time.
You can also type the first few letters of a name to go directly to that part of your list.
5. Press **ENTER** to delete the highlighted entry.
Note: You are not asked to confirm the deletion, so be sure you want to delete it before you press **ENTER**. There is no way to restore a deleted entry.
6. Press **CLEAR** when done.
Press **KJV, NIV or DICT** to exit the Organizer.

✓ Deleting All Entries

You can delete all entries in the databank. Press **▼** or **▲** to highlight **Erase the List** and then press **ENTER**. You see the message "Erase all? (Y/N)". Press **Y** to delete the databank or press **N** to cancel.

Using a Password

You can use a password to prevent unauthorized access to the databank.

Warning! Always write the password in a safe, separate location. If you lose or forget the password, you will only be able to use the databank again by removing the batteries from your device, which will permanently erase all the information stored in the databank.

1. Press **ORG**.
2. Press **DATA**.
3. Press **▼** or **▲** to highlight *Set Password* and then press **ENTER**.

4. Type a password of up to eight characters and then press **ENTER**.

Press **BACK** to delete a letter. Use **◀** or **▶** to move the cursor. To type a number or symbol on a letter key, hold **FN** and press the letter.

5. Press **C** to confirm or **CLEAR** to cancel the password.

Press **KJV**, **NIV** or **DICT** to exit the Organizer.

✓ Changing or Removing the Password

To change the password, repeat steps 1-5 above. To disable a password, press **ENTER** at an empty "Enter new password" screen.

✓ When Do I Type the Password?

The password you set will be requested the first time the databank is accessed during a session. To practice, try the following steps:

1. Complete steps 1-5 above.
2. Press **⏻** twice.
3. Press **ORG**, if necessary to access the Organizer.
4. Press **DATA**.
5. Type the password you just saved and then press **ENTER**.

Using the Calculator

Making Calculations

1. Press **ORG**.
2. Press **CALC**.
3. Type a number.

You can type up to 10 digits.

Note: Q-P will type number 1-0 automatically.

To change the sign of a number, use **Z(+/-)**.

To type a decimal point, press **G(.)**. Press **BACK** to delete a number.

4. Press **H(+)**, **J(-)**, **K(x)**, **L(÷)** to add, subtract, multiply or divide.
5. Type another number.
6. Press **ENTER**.

Or press **F(%)** to calculate a percentage.

To calculate...	Press...
reciprocals	A(1/x)
square roots	S(√x)
squares	D(x²)

7. Press **CLEAR** to clear the calculator.

Press **KJV**, **NIV** or **DICT** to exit the Organizer.

Using the Calculator Memory

Try the following equation to practice using the calculator memory:

$$(32 \times 12) - (8 \times 8) = 320$$

1. Press **ORG**.
 2. Press **CALC**.
 3. Press **B(mc)** to clear the calculator memory, if necessary.
 4. Type 32, press **K(x)**, type 12 and then press **ENTER**.
 5. Press **X(m+)** to add the result to memory. m indicates a number is stored in memory.
 6. Type 8, press **K(x)**, type 8 and then press **ENTER**.
 7. Press **C(m-)** to subtract the result from memory.
 8. Press **V(mr)** to retrieve the number from memory.
 9. Press **CLEAR** to clear the calculator.
- Press **KJV**, **NIV** or **DICT** to exit the Organizer.

Using the Metric Converter

1. Press **ORG**.
 2. Press **CONV**.
 3. Press **▼** or **▲** to highlight the conversion category you want and then press **ENTER**.
- Note:** If you select *Temperatures* you go directly to the entry screen.
4. Press **▼** or **▲** to highlight the units you want to convert between and then press **ENTER**.
 5. Type a number after one of the units.

Note: Q-P will type number 1-0 automatically. To type a decimal point, press **G(.)**. Press **BACK** to delete a number.

Press **▼** or **▲** to move between the lines.

6. Press **ENTER** to convert the units.
7. Press **CLEAR** to clear the current conversion.

Press **KJV**, **NIV** or **DICT** to exit the Organizer.

Using the Currency Converter

1. Press **ORG**.
2. Press **CONV**.
3. Type an exchange rate and then press **ENTER**.

The first time you use the currency converter you must set the exchange rate. You can change this again at any time by pressing **▲** until the cursor is at the "Exchange Rate" field.

The exchange rate should be in units of the other currency per one unit of the home currency (*n* other/1 home). For example, to convert between U.S. Dollars and Euros, enter an exchange rate of 0.702395. This means that 0.702395 Euros is the equivalent of 1 U.S. Dollar.

Note: Q-P will type number 1-0 automatically. To type a decimal point, press **G(.)**. Press **BACK** to delete a number.

4. Type an amount for the home or other currency.
- Note:** Q-P will type number 1-0 automatically. To type a decimal point, press **G(.)**. Press **BACK** to delete a number. Press **▼** or **▲** to move between the lines.
5. Press **ENTER** to convert the amount.
 6. Press **CLEAR** to clear the current conversion.

 
Press **KJV**, **NIV** or **DICT** to exit the Organizer.

Resetting Your Device

If the keyboard fails to respond or if the screen performs erratically, perform a system reset by following the steps below.

1. Hold **CLEAR** and press **⏻**.
- If nothing happens, try Step 2.
2. Use a paper clip to gently press the reset button on your device.

The reset button is in a pin-sized hole on the right side of the back of your device.

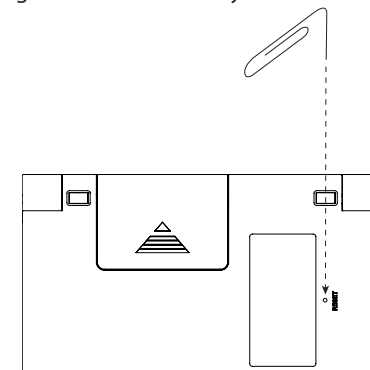

Warning! Pressing the reset button with more than light pressure may permanently disable your unit. In addition, resetting the unit may erase settings and other information you may have entered.

Specifications

Model: BIB-475 *Holy Bible - King James Version & New International Version with Holman Bible Dictionary*

- **Batteries:** two AAA
- **Size:** 5.35 x 3.66 x 0.77 in
- **Weight:** 7 oz (without batteries)

ISBN 978-1-59074-431-1

© 2002-2008 Franklin Electronic Publishers, Inc., Burlington, N.J. 08016-4907 U.S.A. All rights reserved.

Scripture taken from the Holy Bible, King James Version.

Scripture taken from the Holy Bible, New International Version, Copyright 1973, 1978, 1984 International Bible Society.

New International Version is a Registered Trademark of International Bible Society. Used by permission of Zondervan Bible Publishers.

Copyright 2003 Holman Bible Publishers, Nashville, TN. All rights reserved.

U.S. Patents: 5,113,340; 5,218,536; 5,153,831; 5,396,606; 5,640,552; 6,411,973.



Recycling and Disposal

✓ Device Disposal


This device should be disposed through your local electronic product recycling system – do not throw into the trash bin.

✓ Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

✓ Battery Disposal

Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing , or by removing and replacing the batteries.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY
FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE

ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.
Attn: Service Department
One Franklin Plaza
Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write

the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.