

# HOLY BIBLE

## KING JAMES VERSION

### User's Guide

### License Agreement



 


 





 


 
 


READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

#### Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive licensed to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

### Key Guide

#### Function Keys

-  Turns the device on or off.
-  Displays a help message.
-  Goes to the Verse Reference screen. Clears the calculator.
-  Backs up, erases a letter, or turns off the highlight in text. In the Holy Bible, returns to the previous screen.
-  Enters a search request, selects an item, or begins a highlight in text.
-  Expands a search. In the Organizer, goes to the clock.
-  Places a bookmark. In the Organizer, goes to the databank.
-  Goes to the Word search screen. In the Organizer, goes to the calculator.
-  Goes to the Organizer: clock, databank and calculator.
-  Toggles between the Bible menu and the Verse Reference screen. From the Organizer, returns to the Holy Bible.
-  At a menu, displays a menu item. In text, displays the book, chapter and verse.
-  Shifts to type capital letters.
-  Shifts to allow page up, page down, and to type numbers.
-  Pages up or down.
-  In Bible text, goes to the next or previous verse. Following a search, goes to the next or previous match.
-  At a menu, goes to the first or last item. In Bible text, goes to the start or end of the next or previous chapter.
-  At the word search screen, types an asterisk to stand for a series of letters in a word.
- 

\*Hold the first key while pressing the second.

### Direction Keys




Move in the indicated direction.



At menus and dictionary entries, pages down. At the word search screen, types a space. After a space, press ▲ or ▼ to cycle through the available symbols: - . \* ? : .

### Getting Started

The KJV-570 uses two CR-2032 Lithium batteries that come pre-installed. Turn the device over and gently pull the battery insulation sheet to remove it.

Press  to turn the product on. Use a paper clip to gently press the RESET button on the back of the device. For more information, please see "Resetting your Device". **Warning!** Pressing the reset button with more than light pressure may permanently disable your unit. In addition, resetting the unit may erase settings and information you have entered.

#### Replacing the Batteries

The batteries should be changed when you see a low battery warning. Please have 2 new CR-2032 batteries and a small Phillips screwdriver at hand before you follow the steps below.

**Warning!** If the batteries wear out completely, or if you take more than a few seconds while changing the batteries, any user-entered information may be erased. You should always keep written copies of your important information.

1. Turn the unit off and turn it over.
2. Use the Phillips screwdriver to unscrew the battery cover screw.
3. Push gently on the tab of the battery cover and remove it.
4. Remove the old batteries.  
**Note:** Use a paper clip if necessary to remove the old batteries.
5. Install 2 new CR-2032 lithium batteries in their place with positive polarity facing up.  
**Important:** Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
6. Replace the battery cover and secure it with the screw.

**Battery disposal:** Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

### **Battery Precautions**

- Non-rechargeable batteries are not to be re-charged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.
- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.

## **For Your Information**

### **✓ Follow the Arrows**

The flashing arrows on the right of the screen show in which direction you can move around menus or view more text.

### **✓ Help is Always at Hand**

You can view a help message at any screen by pressing **HELP**. Use the direction keys to read the message. To exit help, press **BACK** or **CLEAR**.

### **✓ About Screen Illustrations**

Some screen illustrations in this User's Guide may differ slightly from what you see on screen. This does not mean that your unit is malfunctioning.

### **✓ Resuming Where You Left Off**

You can turn your electronic Holy Bible off at any passage. When you turn it on again, the last passage that you viewed appears, unless you had previously turned on the *Learn a Verse* feature. If *Learn a Verse* is on, you will see a verse for you to memorize. To return to your last viewed passage, press **BACK**.

### **✓ Where in the Holy Bible Am I?**

At any Holy Bible verse, you can view its book, chapter, and verse number by pressing **?**.

## **Viewing a Demonstration or Tutorial**

You can view a demonstration or tutorial of this Holy Bible any time you want.

1. Press **+**.
2. Press **▶** to see the Settings menu.
3. Press **ENTER** to select *Tutorial* or press **▼** to highlight *View Demo* and then press **ENTER**.

To stop the demonstration or exit from the *Tutorial* press **CLEAR**.

To toggle between the Bible menu and the Verse Reference screen, press **+**.

### **✓ Learn a Verse**

Your Holy Bible comes with a *Learn a Verse* feature. Each time you turn your Holy Bible on, you can see a verse from either the Old or New Testament for you to read or memorize. If you wish to turn this feature on, press **+**. Press **▶** to go to the Settings menu, use **▼** to highlight *Learn a Verse* and press **ENTER**. Use **▲** or **▼** to highlight *On* or *Off* and press **ENTER**.

## **Changing the Settings**

When using this Holy Bible, you can activate the *Learn a Verse* feature, adjust the screen contrast, the shutoff time, and the type size. The shutoff time is how long your unit stays on if no key is pressed.

1. Press **+** until you see the Bible menu.
2. Press **▶** to see the Settings menu.

 


3. Use **▲** or **▼** to move the highlight to *Contrast*, *Shutoff* or *Type Size*.
4. Press **ENTER**.
5. Use **▲** or **▼** to change the setting. The current setting is marked.
6. Press **ENTER** to store your changes. Press **BACK** to exit without making a change.

## **Reading the Holy Bible**

*Old Testament* and *New Testament* contain the Books of the Holy Bible.

1. Press **+** until you see the Bible menu.



2. Use **▲** or **▼** to highlight *Old Testament* or *New Testament* and press **ENTER** to select it.
3. Use **▲** or **▼** to highlight a Book and press **ENTER** to select it. You can also type the name of a Book to highlight it. For example, with *New Testament* selected, press **R** to go directly to *Romans*.  
**Note:** For Books that begin with numbers, type the number by holding **FN** and pressing the number key. For example, you can find *2 Kings* in the *Old Testament* by holding **FN** and pressing **W** and then pressing **K**. You can also find it by typing **IK**. That is, type "I" for 1 or "II" for 2.
4. Use **▼** to highlight a Chapter or type its number and press **ENTER** to select it. For example, to highlight *Chapter 5*, press **T**. **Note:** Numbers are automatically active at a Chapter menu.
5. Use **SPACE** to page down. Hold **FN** and press **▲** or **▼** to page up or down. Hold **FN** and press **▶** or **◀** to go to the next or previous verse. Hold **CAP** and press **▲** or **▼** to go to the previous or next Chapter.
6. Press **CLEAR** when done. Press **BACK** to return to the previous screen.

## Using the Index

*Index* contains a list of popular Chapters with their titles, arranged in the order that they appear in the Holy Bible.

1. Press **⏏** until you see the Bible menu.
2. Use **▲** or **▼** to highlight *Index* and press **ENTER** to select it.



3. Use **▲** or **▼** to highlight a selection and press **ENTER** to select it.  
You can also type the name of the Book to go directly to that part of the list, then use **▲** or **▼** to highlight the section you want.  
For example, to highlight *Isaiah 25:1*, type **IS**, then press **▼** until you see the index entry for *Isaiah 25:1*.  
**Note:** For Books that begin with numbers, type the number by holding **FN** and pressing the number key. For example, you can find *2 Kings* in the *Old Testament* by holding **FN** and pressing **W** and then pressing **K**. You can also find it by typing **I1K**. That is, type "1" for 1 or "11" for 2.  
**Note:** Hold **CAP** and press **▲** or **▼** to go directly to start or end of the list.
4. Use **SPACE** to page down.  
Hold **FN** and press **▲** or **▼** to page up or down. Hold **FN** and press **▶** or **◀** to go to the next or previous verse. Hold **CAP** and press **▲** or **▼** to go to the previous or next Chapter.
5. Press **CLEAR** when done.  
Press **BACK** to return to the previous screen.
6. Press **BACK** to return to the Index.

## Viewing Devotional Verses

*Devotional* contains a list of inspirational Verses.

1. Press **⏏** until you see the Bible menu.
2. Use **▲** or **▼** to highlight *Devotional* and press **ENTER** to select it.



 
3. Use **▲** or **▼** to highlight a selection and press **ENTER** to select it.  
You can also type the name of the month to go directly to that part of the list, then use **▲** or **▼** to highlight the one you want.  
For example, to see the Devotional Verse for October 23, type **O**, then press **▼** until you see the entry for *Oct. 23*.  
**Note:** Hold **CAP** and press **▲** or **▼** to go directly to start or end of the list.
4. Use **SPACE** to page down.  
Hold **FN** and press **▲** or **▼** to page up or down. Hold **FN** and press **▶** or **◀** to go to the next or previous verse. Hold **CAP** and press **▲** or **▼** to go to the previous or next Chapter.
5. Press **CLEAR** when done.  
Press **BACK** to return to the previous screen.

 
## Finding Holy Bible Verses

To go directly to a specific Holy Bible verse, enter its Book title, Chapter number, and Verse number.

If you enter only a Book title and Chapter number, you will go to the start of the Chapter. If you enter only a Book title, you will go to the start of that Book.

1. Press **CLEAR** or press **⏏** until you see the Verse Reference screen.



2. Type a Book title.  
To erase a letter, press **BACK**.  
When you type the initial letters of a Book title, it will be automatically completed for you. For example, type **LA** for *Lamentations*, **LE** for *Leviticus* or **LU** for *Luke*.  
**Note:** If you have not typed enough letters for the Book title to auto-complete, you can see a list of all Books that match the letters you have entered by pressing **ENTER**. Press **▲** or **▼** to highlight the Book you want and then press **ENTER** to return to the Verse Reference screen and finish typing the Chapter and Verse.  
**Note:** For Books that begin with numbers, type the Roman numeral using the **I** key. For example, you can find *2 Kings* by typing **I1K**. That is, type "1" for 1 or "11" for 2.  
Once the Book title is filled in, the cursor automatically jumps to the Chapter field.
  3. Type a Chapter and Verse number.  
Press **Q-P** to type a Chapter number. Press **SPACE** to move to the Verse field and type the Verse number you want. **Note:** Numbers are automatically active in the Chapter and Verse fields.
- 
4. Press **ENTER** to go to the Verse you typed.
  5. Use **SPACE** to page down.  
Hold **FN** and press **▲** or **▼** to page up or down. Hold **FN** and press **▶** or **◀** to go to the next or previous verse. Hold **CAP** and press **▲** or **▼** to go to the previous or next Chapter.
  6. Press **CLEAR** when done.  
Press **BACK** to return to the previous screen.

## Searching for Words

Just as if you were using a concordance, you can search for almost any word or phrase in this Holy Bible. Simply enter search words to find their occurrences, or matches.

1. Press **FIND**.
2. Type your search word(s).  
For example, type **Kingdom of God**.  
You can type up to 35 letters. To type a space, press **SPACE**. To erase a letter, press **BACK**.  
Search results include only those Verses that contain all of the keywords you searched for. **Note:** You cannot search for common words such as *and* and *the* on their own.
3. Press **ENTER** to start the search.  
After a search, only those Books with matches are listed in the menu. **Note:** The number of matches in each Book is displayed following the Book title.

- Use ▲ or ▼ to highlight the Book you want, then press **ENTER** to see the Chapters of the selected Book where the matches occur.  
For example, select *Psalms [2]*.  
You go directly to the text of the first match in the Book of Psalms. Note that the matching words are boxed in the text. Hold **FN** and press ► or ◀ to see the next or previous match. At any time, press ? to see your current Verse.  
**Note:** You may also hold **FN** and press **ENTER** to go directly to the text at the first match in the Bible.
- Press **CLEAR** when done or press **BACK** to return to previous screen.

### ✓ Correcting Misspellings

If you enter a misspelled word, or a word not in this Holy Bible, a list of corrections appears. Highlight the word you want and then press **ENTER**, or press **BACK** to change your request.

## Finding Letters in Words

If you are uncertain about how to spell a word or if you wish to find prefixes, suffixes, and other parts of words, type an asterisk (\*) in a word. Each asterisk stands for zero, one or more letters in a word. **Note:** If you type an asterisk at the beginning of a word, it may take a little while to find the matching words.

- Press **FIND**.
- Type a word with \*s.  
To type an asterisk, hold **CAP** and press ?.
- Press **ENTER**.
- Press ▼ to highlight the match you want and then press **ENTER** to search for it.  
To learn how to view the matches, please see “Searching for Words.”
- Press **CLEAR** when done.

## Expanding Your Search

You can expand your search to find inflections, synonyms and similar words.

- Press **FIND**.
- Type your search word(s) and press **ENTER**.
- Press **MORE** repeatedly to expand the search.  
To learn how to view the matches, please see “Searching for Words.”
- Press **CLEAR** when done.

## Highlighting Words

You can also search for a word by highlighting it in a Verse. Try this example.

- Go to *Isaiah 12:2*.  
To learn how, see “Finding Holy Bible Verses.”
- Press **ENTER** to start the highlight.

To turn the highlight off, press **BACK**.

- Use the navigation button to move the highlight to *salvation*.
- Press **ENTER** to search for the highlighted word.  
To learn how to view the matches, please see “Searching for Words.”
- Press **CLEAR** when done.

## Viewing Footnotes

Whenever you see an [F] after a word in a verse, that word has a footnote. You can easily view these footnotes. Try this example.

- Go to *Psalms 18:2*.  
To learn how, see “Finding Holy Bible Verses.”
- Use ▼, **FN + ▼** or **SPACE** to scroll down.

Notice the footnote marker [F].

- Press **ENTER** to start the highlight.
- Use the navigation button to move the highlight to the desired footnote and then press **ENTER** to view it.

Or you can hold **FN** and press **ENTER** to immediately open the note. **Note:** This functions only when one footnote marker is on the screen.

- Press **BACK** to return to the verse.

### ✓ Understanding Footnotes

The footnotes in this Holy Bible have been added by Franklin Electronic Publishers to clarify the meaning of archaic English words. These footnotes are not part of the original *King James Bible*.

### ✓ When More Than One Footnote Marker Appears

Sometimes more than one [F] appears on the screen.

Hold **FN** and press **ENTER** to automatically highlight the first footnote marker. Continue to hold **FN** and press **ENTER** to cycle the highlight through all the footnote markers on the screen. When the highlight is on the footnote you want to open, press **ENTER** to view the text of the footnote.

Press **BACK** to go back to the verse.

## Using Bookmarks

### Adding Bookmarks

You can add up to 50 bookmarks to the text of this book for quick reference.

- Press **MARK** at any verse to place a bookmark.  
You see the bookmarks list with *Add Bookmark* highlighted.

- Press **ENTER** to add the bookmark.

The [F] marks its placement.

## Viewing Bookmarks

1. Press **CLEAR**.
2. Press **MARK** to view your list of bookmarks.



3. Press **▼** to highlight a bookmark.
4. Press **ENTER** to view its verse.

## Deleting a Bookmark

You can delete any bookmark you want. **Note:** If you reset your device, all your bookmarks will be lost.

1. Press **CLEAR**.
2. Press **MARK** to view your list of bookmarks.
3. Press **▼** to highlight the bookmark you wish to delete.  
For example, if you had "Isaiah 53" on your bookmark list, highlight *Isaiah Chapter 53*.
4. Press **ENTER** to go to that verse.
5. Press **MARK** again.



*Remove:* (the last viewed bookmark) appears as the first list item, and is highlighted.


6. Press **ENTER** to delete the bookmark.

## Adding Notes to a Bookmark

You can add a brief note to accompany any bookmark you have added. **Note:** If you reset your device, all your notes will be lost.

1. Press **CLEAR**.
2. Press **MARK** to view your list of bookmarks.
3. Press **▼** to highlight the bookmark for which you want to add a note.  
For example, if you had "Psalms 23" on your bookmark list, highlight *Psalms Chapter 23*.
4. Press **ENTER** to go to that verse.
5. Press **MARK** again.  
*Remove Bookmark* appears as the first list item, and is highlighted.
6. Press **▼** to highlight *Add Notes* and press **ENTER**.
7. Type your note and press **ENTER** to add it.

## Viewing a Note

1. Find a location in the text where you have saved a note with a bookmark.
2. Use **▼**, **FN + ▼** or **SPACE** to scroll down until you see .
3. Press **ENTER** to start the highlight.
4. Use the navigation button to move the highlight to the bookmark marker and then press **ENTER** to view the note.  
If no note has been saved to a bookmark, you see the message "Not found."
5. Press **BACK** to return to the verse.

## Using the Clocks

The clock lets you set a Home time and view local times in 45 cities around the world. you must set the Home time before viewing World times as World times are based on Home time.

### Setting Home Time

1. Press **ORG**.  
You see "Home City" on the screen. The Home time clock is the default location any time you press **ORG**.  
**Note:** You can press **ORG**, **FIND** or **ENTER** to toggle between Home time and World time.
2. Press **S** to enter go to the Home Setting menu.
3. Press **ENTER** to select *Set Time Format*.  
Press **▲** or **▼** to cycle through the 12- and 24-hour Day/Month/Year formats. Press **ENTER** to save your selection.
4. Press **▼** to highlight *Set DST* (Daylight Saving Time) and press **ENTER** to select it. Press **▲** or **▼** to toggle between *DST On* or *DST Off*. Press **ENTER** to select your choice.
5. Press **▼** to highlight *Set Time* and press **ENTER** to select it.  
Press **▲** or **▼** until the current hour is displayed. Press **▶** to move to the minutes field, then press **▲** or **▼** until the current minute is displayed. Press **ENTER** to set the time.
6. Press **▼** to highlight *Set Date* and press **ENTER** to select it.  
Press **▶** or **◀** to move to the next or previous field. Use **▲** or **▼** to move to the current day/month/year. Press **ENTER** to set the date.
7. Press **▼** to highlight *Set Home City* and press **ENTER** to select it.  
Press **▲** or **▼** until your local city is displayed. Press **ENTER** to select your choice.
8. Press **CLEAR** or **BACK** to exit the Home Setting menu.

### Viewing World Time

1. Press **FIND** until you see "World City."
2. Press **▲** or **▼** to view the date and time in the list of available cities.  
**Note:** The date and time in each World city is based on the date and time as indicated in your Home city.

You can also set a city to be the World city you first view when you enter World Time.

1. Press **FIND** until you see "World City."
2. Press **S** to enter go to the World Setting menu.
3. Press **ENTER** to select *Set DST*.  
Press **▲** or **▼** to toggle between *DST On* or *DST Off*. Press **ENTER** to select your choice.
4. Press **▼** to highlight *Set World City* and press **ENTER** to select it.  
Press **▲** or **▼** until the city you want is displayed. Press **ENTER** to select your choice. **Note:** At this list, you can see both the city name and its abbreviation.
5. Press **CLEAR** or **BACK** to exit the World Setting menu.

## Using the Databank

### Adding Entries

You can store as many as 100 names and telephone numbers in the databank. The total number of names you can add depends on the size of each entry.

1. Press **ORG**.
2. Press **MARK**.
3. Use **▲** or **▼** to highlight *New Entry* and then press **ENTER**.
4. Type a name and press **ENTER**.  
To erase a letter, press **BACK**. Press **SPACE** then **▲** or **▼** to cycle through the available symbols: - . \* ? : .
5. Type a phone number and press **ENTER**.  
**Q-P** will type numbers 0-9 automatically. To erase a number, press **BACK**.
6. Press **CLEAR** when done.  
Press **⏪** to return to the Holy Bible.

### Viewing or Editing Entries

1. Press **ORG**.
2. Press **MARK**.
3. Use **▲** or **▼** to highlight *View: XX entries* and then press **ENTER**.
4. To edit an entry, highlight it and press **ENTER**.  
Type your changes. Use **◀** or **▶** to move the cursor; use **BACK** to delete.
5. Press **ENTER** to move to the number field.
6. Press **ENTER** again to save your changes.
7. Press **CLEAR** when done.  
Press **⏪** to return to the Holy Bible.

### Deleting Entries

1. Press **ORG**.
2. Press **MARK**.
3. Use **▲** or **▼** to highlight *Delete Entry* and then press **ENTER**.
4. Highlight the entry you want to delete and press **ENTER**.  
You are asked to confirm the deletion. Press **Y** to confirm or **N** to cancel.
5. To delete all databank entries, highlight *Erase All Data* in the Databank menu and then press **ENTER**.  
You are asked to confirm the deletion. Press **Y** to erase all databank entries or **N** to cancel.
6. Press **CLEAR** when done.  
Press **⏪** to return to the Holy Bible.

### Using a Password

You can use a password to prevent unauthorized access to the databank. **Warning!** Always write the password in a safe, separate location. If you lose or forget the password, you will be able to use the databank again only by removing the batteries from your unit, which will permanently erase all the information stored in the databank.

1. Press **ORG**.
2. Press **MARK**.
3. Use **▲** or **▼** to highlight *Set Password* and then press **ENTER**.
4. Type a password of up to eight characters and press **ENTER**.  
Use **◀** or **▶** to move the cursor; use **BACK** to delete.

5. Press **C** to confirm your password or **CLEAR** to cancel the password.  
The password you set will be requested the first time the databank is used during a session.
6. To change the password, repeat Steps 1-5.  
To remove or disable a password, press **ENTER** at the blank password screen.
7. Press **CLEAR** when done.  
Press **⏪** to return to the Holy Bible.

## Using the Calculator

1. Press **ORG**.
  2. Press **MORE**.
  3. Type a number.  
**Note:** **Q-P** will type numbers 0-9 automatically. You can type up to 10 digits. To type a decimal, press **G(.**). To change the sign of a number, press **Z(+/-)**.
  4. Press a math function key (**H-L**).
  5. Type another number.
  6. Press **ENTER**.  
To repeat the calculation, press **ENTER** again.
- | To Calculate...  | Press...                |
|------------------|-------------------------|
| reciprocals      | <b>A(1/x)</b>           |
| squares          | <b>D(x<sup>2</sup>)</b> |
| percentages      | <b>F(%)</b>             |
| square roots     | <b>S(√x)</b>            |
| negative numbers | <b>Z(+/-)</b>           |
7. Press **CLEAR** to clear the current calculations.
  8. Press **⏪** to return to the Holy Bible.

### Using the Calculator Memory

1. In the calculator, make a calculation or type a number.
2. To add the number on the screen to the number stored in memory, press **X(M+)**. To subtract the number on the screen from the number stored in memory, press **C(M-)**.  
**m** indicates the number is stored in memory.
3. To retrieve the number from memory, press **V(MR)**.
4. To clear the memory, press **B(mc)**.

## Resetting Your Device

If the keyboard fails to respond, or if the screen performs erratically, perform a system reset by following the steps below.

1. Hold **CLEAR** and press **⏻**.  
If nothing happens, try Step 2.
2. Use a paper clip to gently press the reset button on your product.  
The reset button is recessed in a pin-sized hole on the back of the device.  
The message "Erase All ? (Y/N)" is displayed.  
**Note:** This message refers to user-entered information, not the text of the Holy Bible. User-entered information includes bookmarks, the databank and any settings you may have changed.
3. Press **N** to save your information.  
Press **Y** to erase your information.

**Warning!** Pressing the reset button with more than light pressure may permanently disable your device. In addition, resetting your device erases settings and user-entered information.

## Specifications

### **Model KJV-570: Holy Bible King James Version**

- **Batteries:** two CR-2032 3 volt lithium
- **Size:** 12.3 x 9.1 x 1.35 cm
- **Weight:** 117.1 oz

ISBN 978-1-59074-433-8


© 2002-2007 Franklin Electronic Publishers, Inc., Burlington, N.J. 08016-4907 USA. All rights reserved.

Scripture taken from the HOLY BIBLE, KING JAMES VERSION.

U.S. Patents: 4,830,618; 5,113,340; 5,218,536; 5,153,831; 5,497,474; 5,396,606; 6,411,973

**Note:** This device should be disposed through your local electronic product recycling system - do not throw into the trash bin.



This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing , or by removing/replacing batteries.

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

## Limited Warranty (U.S. only)

### **LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY**

FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE

DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION. EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.  
Attn: Service Department  
One Franklin Plaza  
Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, and a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

## Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

## Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.